 
 
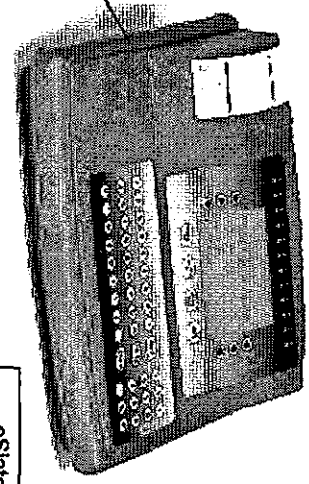 


The eSlate  
Polling Place  
System

Judge's  
Booth  
Controller, or  
JBC

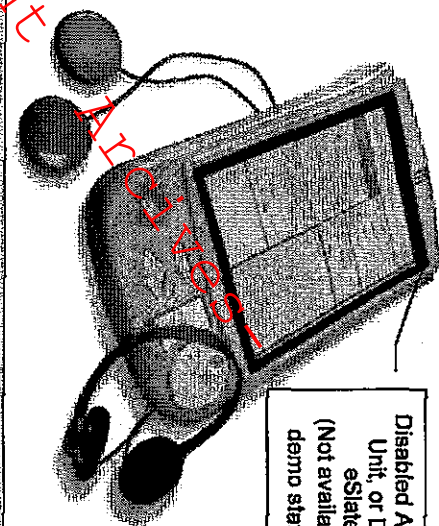

eSlate

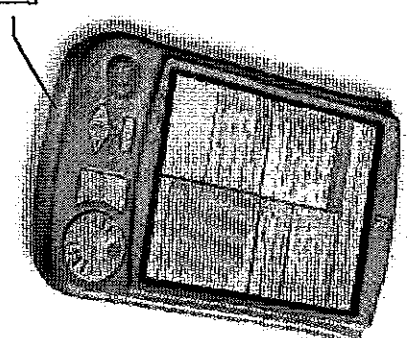 


Disabled Access  
Unit, or DAU  
eSlate  
(Not available at  
demo station)

Setting Up the Demonstration Station

1. Unpack the JBC and eSlate.
2. Connect the gray booth cord from the JBC to the eSlate.
3. Attach the black power cord and plug the JBC in.
4. Follow the directions on the JBC screen to assign the booth number. Press **ENTER** on each eSlate.
5. On the JBC, press the **Next** button.
6. Press the **Next** button.
7. You are ready to add voters.

Adding Voters

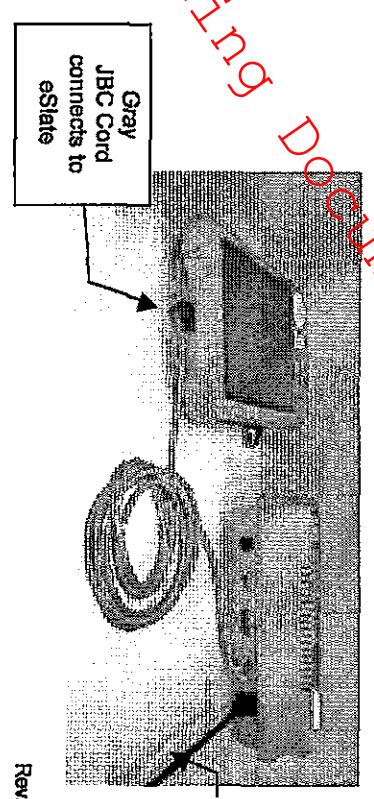

Gray  
JBC Cord  
connects to  
eSlate

Black  
Power  
Cord  
goes to  
an outlet

Rev. Demo B

1. Give the voter instructions on how to use the eSlate.
2. To add a new voter to the system, on the JBC press the **Next** button.
3. On the JBC, press the **Next** button, and the JBC prints an **ACCESS CODE**.
4. Hand the **ACCESS CODE** to the voter, and instruct the voter to go to the eSlate.

Refer to the other side of this reference card for voter instructions.

Folls Open 07:01:22  
Election Name  
Codes Active : 00000  
Other  
Add Voter  
Check Code

ACCESS CODE  
Clave de Acceso  
**4192**  
Date: 11-07-2000  
Time: 15:42:21  
Place: Mesa Elementary  
Precinct: 0010

**Instructing Voters**

- Point to an Instruction Flyer, placard, or demo eSlate and say:**
1. You will be learning how to vote on the eSlate today. First, turn the **SELECT** wheel to highlight your language and press **ENTER**.
  2. Turn the **SELECT** wheel to highlight the first number of your **ACCESS CODE**. Press **ENTER**. Do this for each number.
  3. Turn the **SELECT** wheel to highlight your ballot choice. Press **ENTER**. The box to the left of the choice changes to red. Do this for each contest. You can skip pages with **NEXT**.
  4. Read the **BALLOT SUMMARY** carefully. Press **CAST BALLOT**. You have finished voting when you see the waving American flag.

**Packing Equipment**

1. **DO NOT** "Close Polls", since you are running a demonstration eSlate. Simply unplug the power cable from the back of the JBC.
2. Unscrew and disconnect the JBC booth cable from the first eSlate.
3. Coil the JBC booth and power cords and set them on top of the JBC.
4. Leave the JBC sealed. **DO NOT** remove the MBB.
5. Match the JBC serial number to the JBC box serial number, and pack the JBC and all cords in its box with the plastic bag and foam insert.
6. Match the eSlate serial number with the eSlate box serial number, and pack the eSlate into its box with the plastic bag and foam insert.
7. Pack all other small equipment (extension cords, power strip, etc.) in the JBC box if it fits without damaging the JBC or the box.
8. Secure the equipment in its storage area.

**If there are system errors:**

1. Check all connections.
2. Disconnect the black power cord from the JBC.
3. Reconnect JBC black power cord to the JBC.
4. Assign booth numbers, like you did when setting up.
5. Continue to add voters.

 
**If restarting the system does not fix the system errors, call the Help Line.**

**Other Features for Voters:**

- Use **PREV** or **NEXT** to move between pages of the ballot.
- Change a choice by turning the **SELECT** wheel to your new choice and pressing **ENTER**.
- Cancel your choice by pressing **ENTER** a second time after highlighting that choice with the **SELECT** wheel.
- Change a choice from the **BALLOT SUMMARY** by turning the **SELECT** wheel to highlight the line you wish to change then pressing **ENTER**. You will go back to that race.
- If you choose to vote straight party, go through the pages of the ballot with **NEXT** after choosing your party.
- In multi-page ballot summaries you must use **NEXT** to move to the final page, and then use **CAST BALLOT**.
- You do not need to vote in all contests, if you choose not to.
- If you do not vote in the final contest on the ballot, you must press **NEXT** or **CAST BALLOT** to reach the **BALLOT SUMMARY**.

To vote for a write-in, if a write-in choice is available:

- Turn the **SELECT** wheel to the write-in choice and press **ENTER**. Turn the **SELECT** wheel and press **ENTER** to spell out the name of the candidate you wish to write in. Turn the **SELECT** wheel to highlight **Accept** and press **ENTER**. Other choices are **Back** to go back a space, **Space** to skip a space, and **Cancel** to return to the ballot without writing in a choice.

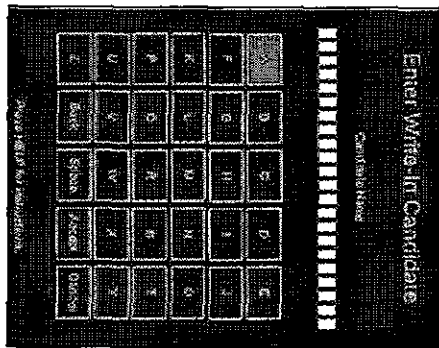

**Troubleshooting**

**If you need to replace JBC printer paper:**

1. Lift the printer cover, raise the paper feed lever, and remove the old paper roll.
2. Put the spindle into the new roll with the paper rolling out from the bottom.
3. Place the spindle in its slot, feed the paper through the printer and through the slot in the cover.
4. Lower the paper feed lever, close the printer cover, and continue.

