

## Resetting JBC and eSlates

1. Connect all eSlates to JBC and power up JBC.
2. Power on Laptop. Password is ballots (Use AC power cord since battery maybe low.)
3. Connect Parallel cable Silver end into Laptop.
4. Connect other end of Parallel cable into printer port on JBC.
5. Double click on Reset icon on Desktop of Laptop.
6. Password for Reset is hartic, in all lowercase.
7. Click on the Reset PVS button and wait till Status window says "RESET Complete"
8. Power off JBC and unplug Parallel cable from JBC.
9. Replace old flash cards with new cards.
10. Turn JBC back on and use Polling Place ID 1 and open the polls in early voting mode.

Give me a call if you have any problems.

Steven

Ballot Box  
Voting Document Archives-